

TECHNICAL INFO


Bagmate® is a carefully engineered, injection moulded polycarbonate hook from which a bag, or other small item of personal luggage, can be suspended by its own handle or strap*. The item is easily placed onto the **Bagmate®** but some coordination is required for its removal, making 'handbag snatching' virtually unachievable.

For the under-side of tables, our designs are affixed so that the hook opening faces inwards towards the center and away from the edge of the table so as to minimise bag snatching.

The maximum weight Bagmate will hold is approximately 100kg, but of course that will depend on the strength & installation technique of the screw or adhesive fixing which holds the bagmate in place.

* *Shoulder length handbags will need to be hooked via the ring fastener between strap and bag.*

HOW TO INSTALL BAGMATE HOOKS

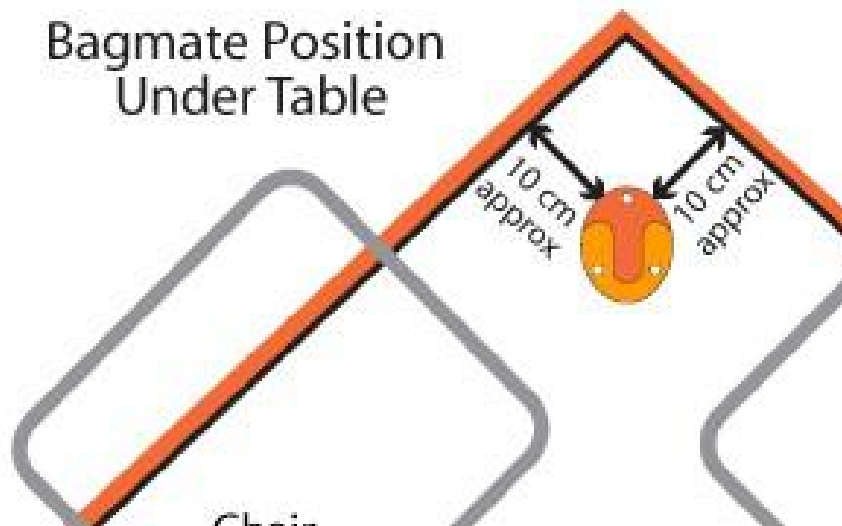

NOTE: For tables with only 2 chairs at opposite ends, position Bagmate hook, 10 cm in, half way along most accessible edge of table between the 2 seats.

Timber, Plastic & Laminex Surfaces

**Supplied - Self Tapping Screws *You need - Pen and Screwdriver and/or Cordless Drill*

1. Place Bagmate evenly between chairs with hook opening facing centre of table.
2. Mark screw holes with pen.
3. CAUTION: Ensure screws & holes shorter than table top depth!
4. Drill holes with 3-4mm drill bit. Depth to suit length of screws.
5. Screw in screws. (If using cordless drill this can be done omitting point 4)

Other **Smooth Surfaces

- **Supplied - Adhesive Pad**
- **You need - Pen, Pure Alcohol & water solution or “Septone” wax & grease remover and clean cloth**
 1. Place Bagmate evenly between chairs with hook opening facing centre of table.
 2. Mark position with removable ink.
 3. Ensure both surfaces are clean and free from chemical residue using alcohol solution - allow to dry
 4. Affix adhesive pad primarily to largest part of underside Bagmate surface with caution. Peel “white backing” to fit exact circumference. (Accuracy is imperative as pad adheres immediately.)
 5. Red side should be showing at this point, smooth out any air bubbles firmly.
 6. Remove red tape ** and apply Bagmate to position marked under table top or counter surface using some pressure to hold in place
 7. Allow 24 hours prior to use for best results

**** Red tape is tricky!!! Use sharp point of knife or blade to lift tape at first point of contact before attempting to peel back. Due to extra strength adhesion it can be difficult to remove.**

PLEASE NOTE:

- Proper Preparation of both surfaces is imperative. Do NOT use Turps, Metho or Acetone - these will leave residue. Must use recommended Septone, pure alcohol or pure alcohol & water solution.
- Adhesive pads are suited to smooth surfaces. Glue does not fill gaps so rippled glass surfaces or rough chip board will not bond - if your surface is such, the only way to affix would be to drill into the frame of the table if feasible or use screws, please call us for advice if you are unsure.
- Designed only for the underside of a surface. Adhesive is not suitable for vertical placement.
- For large order quantities, a template can be easily made to assist with adhesive application:

You need; a small piece of timber (larger than the hook); some blu tack, a pencil, some small nails and a hammer.

1. Place one hook on a piece of timber holding it in place with a piece of blu tack
2. Use a pencil to trace the outline of the hook and remove - set aside.
3. Hammer the nails onto the outline of the drawing - the template is now ready for use
4. Prepare the hook as mentioned in step 3 above and Peel “white backing” from pad
5. Place pad inside nail outline in middle of template, red side down, sticky grey side up
6. Take hook and place on top of pad firmly.

General Installation Tips - For tables you can lift

- Select one table in centre of section (work table), place any table top numbers/condiments on chair (this will prevent mixing up table numbers and should be practiced with each table)
- Use blanket or protective cloth to protect table top surfaces on work table.
- Place tables upside down, one at a time on top of this central work table to install hooks with cordless drill or self adhesive pad, as per the recommendation for your under-table surface type.